

customer/technical services

For any technical or installation queries please contact Vado on 01934 745163.

guarantee

This product is guaranteed against manufacturing defects from the date of purchase until the expiry of the relevant guarantee period shown below.

The guarantee is only valid if:-

1. The product has been installed, used and maintained in accordance with Vado's instructions and subjected to normal use only.
2. The defect is not due to use of an unsuitable or inadequate water or power supply.
3. The defect is not due to accident, misuse, neglect or repair other than by Vado or Vado authorised agents or damage caused by foreign objects or substances.
4. We have received from you the completed Guarantee Registration Form. Vado accepts no responsibility for any forms lost in the post and returns by registered means is therefore recommended.

Under this guarantee (which is non-transferable) Vado will, at its option, repair or replace free of charge any product (or replacement part) found to be defective. The guarantee does not extend to any consequential loss or damage. After repair or replacement the relevant guarantee period will be calculated from the original date of purchase.

The relevant guarantee periods are:-

1. Twelve years on chrome finish products.
2. Three years on all other products with the exception of Stuart Turner Pumps which carry a 2 year Guarantee on Monsoon Range and 1 Year Guarantee on Showermate Range.

All claims under the guarantee must be submitted in writing to the person who supplied the product to you and must be received no later than the last day of the relevant guarantee period. All claims must be accompanied by proof of purchase (sales receipt or delivery note).

Vado operates a policy of continuous product development and therefore reserves the right to change the product, packaging and documentation specifications without notice.

This guarantee is in addition to and does not affect your statutory rights as a consumer.

Vado


Wedmore Road, Cheddar, Somerset, England BS27 3EB
tel 01934 744466. fax 01934 744345
technical@vado-uk.com
www.vado-uk.com

GUARANTEE REGISTRATION

| | | | | |
|----------------------------|----------------|-----------|---------|------|
| NAME | | | | |
| ADDRESS | | | | |
| | POSTCODE | | | |
| RETAILER | | | | |
| ADDRESS | | | | |
| | POSTCODE | | | |
| PURCHASE DATE | ARTICLE NUMBER | (SEE BOX) | | |
| PRODUCT DESCRIPTION | | | | |
| WHO INSTALLED THE PRODUCT? | RETAILER | PLUMBER | BUILDER | SELF |
| FOR VADO USE | | | | |
| | | | | |



installation & maintenance instructions

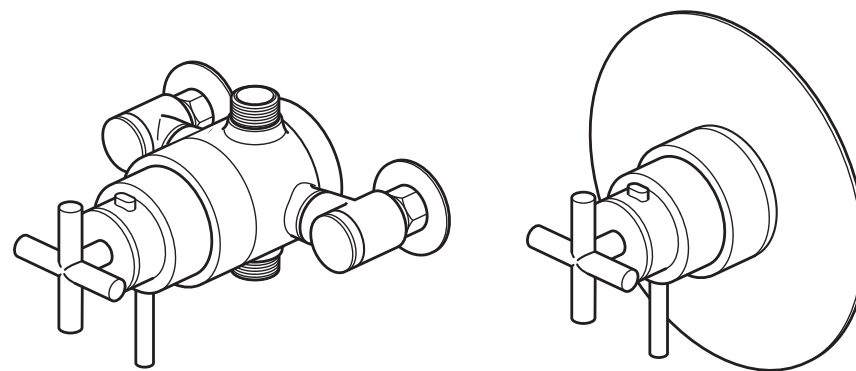

celsius

Celsius exposed and concealed thermostatic single axis valve
with round and square back plates

NOTE: For illustrative purposes only the concealed valve with round back plate is shown.
Please follow the same procedure to install the concealed valve with square back plate.

please leave these instructions with the customer

important - please read

Please read these instructions carefully before starting installation and keep for future reference.

Remove all packaging and check the product for missing parts or damage before starting installation.

Any alterations made to this product and fittings may infringe water regulations and will invalidate the guarantee.

The installation must comply with all Local/National Water Supply Authority Regulations/Byelaws and Building and Plumbing (UK:BS6700) Regulations.

We strongly recommend that you use a qualified and registered plumber.

general installation

Thermostatic Valves

This mixer valve is suitable for any water system. Where instantaneous heaters are used, the flow of hot water sufficient to start and go on burning must reach the minimum flow required – as specified by the heater manufacturer.

These fittings are mixing devices and therefore water supplies must be reasonably balanced.

Where connections are made to the mains cold water supply, WRC approved single check valves must be fitted to both hot and cold inlets. This is a stated requirement of Water Supply (Water Fittings) Regulations 1999 Schedule 2, Section 6 G15.13.2

Before making any inlet pipe connections, all supply pipes MUST be thoroughly flushed to remove debris. Failure to do so could result in damage or low flow from the mixer unit. Water Supply (Water Fittings) Regulations 1999 Schedule 2 Section 4 G13.1

The fitting of isolating valves to the inlet feeds is advised for ease of maintenance.

Please take great care when installing this mixer not to damage its surface.

Operating pressures (on hot and cold line) should be kept as balanced as possible in order to assure optimum efficiency.

Note: When pressure is higher than 5 bar a pressure reducer is required to be fitted before the valve.


care of the mixer

Our products are finished to the highest standard and due care needs to be taken to ensure their looks are retained.

We recommend cleaning all products with a soft damp cloth ONLY and advise strongly against the use of ALL cleaning products i.e. powders and liquids.

If the above instructions are not followed this will invalidate your guarantee in the event of a problem occurring.

operation

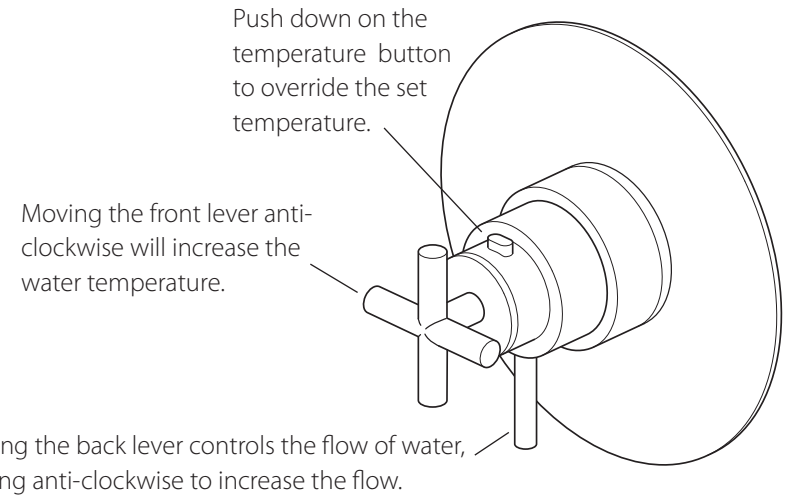


maintenance

Depending on the water quality, the cartridge may become dirty, causing reduced flow and inefficiency.

To clean, you must first remove the cartridge from the housing.

1. Shut off the water supply to both inlets at the isolating valves.
2. Remove the handle, stop ring. Release the circlip and pull off the temperature override ring. Release the circlip on the flow control ring and remove. Pull off the valve cover.
3. Remove the 3 screws securing the thermostatic cartridge (take care as the cartridge is under pressure and will require some force when reassembling).
4. Rinse the cartridge in water to remove the dirt and then soak in vinegar or descaling agent.
5. Before reassembling the cartridge, clean its housing with a wet cloth and grease the 'O' rings on the cartridge.
6. Reassemble the cartridge and handles to the valve body.
7. Ensure that the stop of the thermo stop ring is pointing at 12 o'clock, and push onto the splines, being careful not to turn the valve. Secure the stop ring with the screw, push on the handle and secure in place with the grubscrew
8. Make sure everything is tight and secure and turn on the water supply at the isolating valves.
9. Now check the water temperature to ensure you are happy with it.

temperature resetting

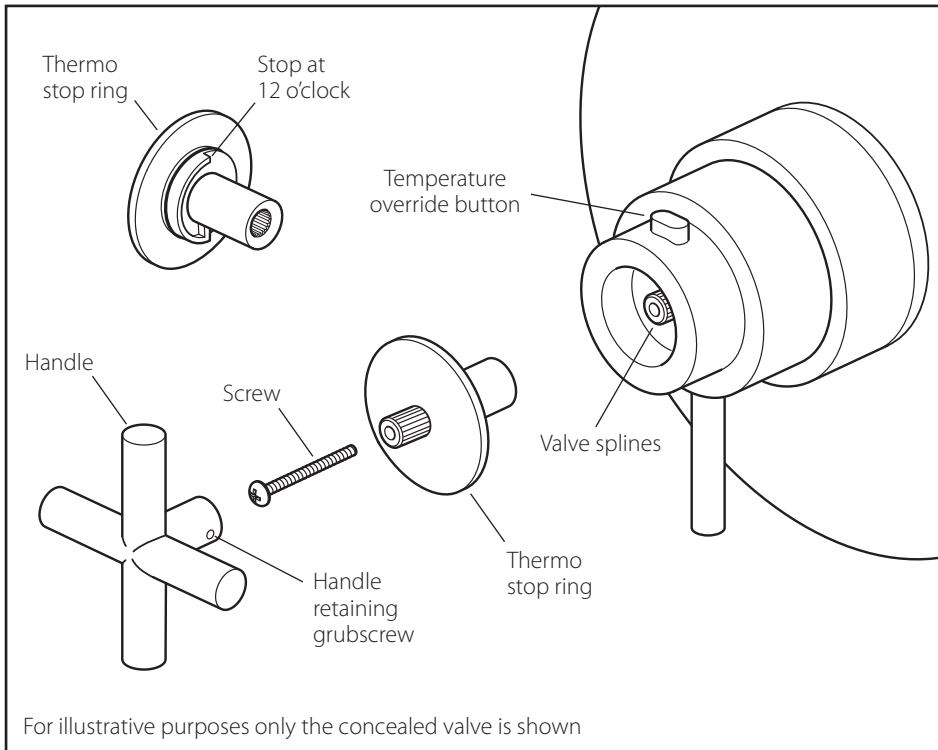

The valve has been factory set under balance pressures and hot water supply at 65° C. When your specific operating conditions are significantly different from the above, the temperature of the water may vary from the setting.

When the difference is too great, you can adjust the calibration of the valve to suit individual requirements of the installation:

1. Select 38° C by checking the temperature of the water being delivered to the outlet with a thermometer.


2. If the temperature is unacceptable proceed to reset the calibration as follows: Remove the handle by loosening the grubscrew, remove the stop ring retaining screw and pull off the stop ring. Turn the spline of the valve clockwise to decrease the temperature and anti-clockwise to increase the temperature until 38° is achieved (you can temporarily use the stop ring to turn the splines).

3. Ensure that the stop of the thermo stop ring is pointing at 12 o'clock (see detail), and push onto the splines, being careful not to turn the valve.

Secure the stop ring with the screw, push on the handle and secure in place with the grubscrew

The valve setting is now calibrated to suit your requirements.

dimensions

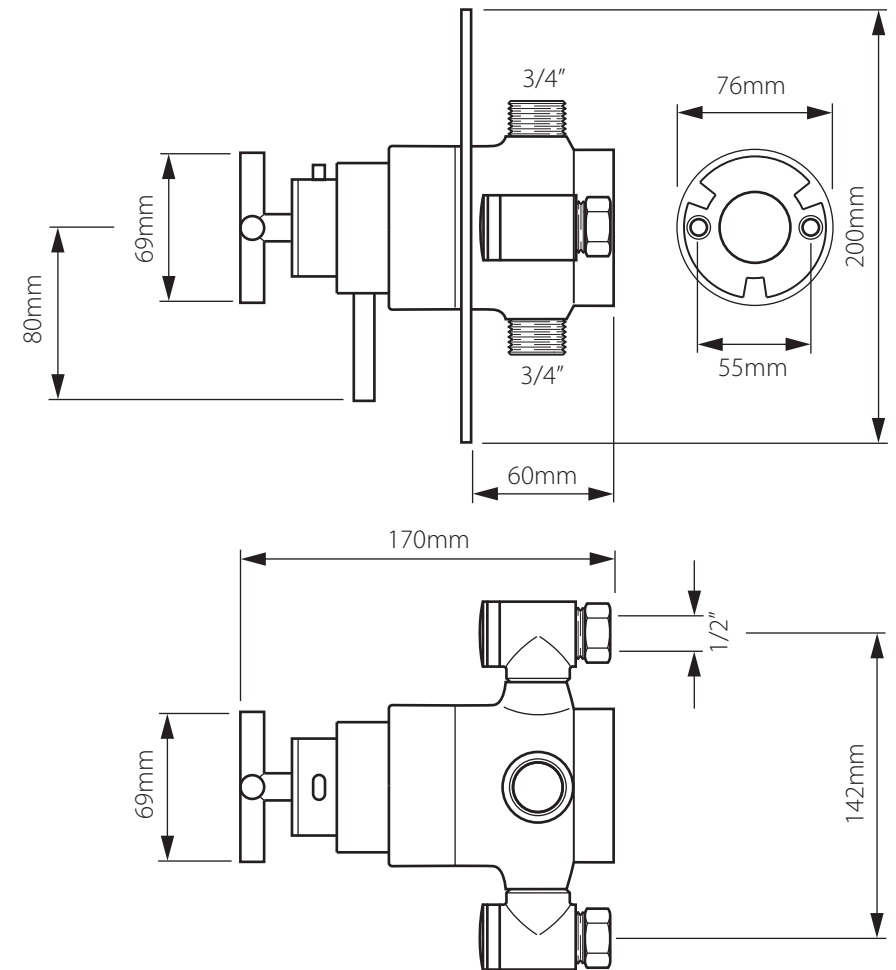

Operating Specifications

Hot Water Supply Temperature:

Maximum: 85° C


Minimum: 10° C higher than the maximum required mixed temperature (advise 65° C)

Operating Pressure

Minimum operating pressure 0.2 bar

Maximum operating pressure 5 bar

installation (exposed valve)

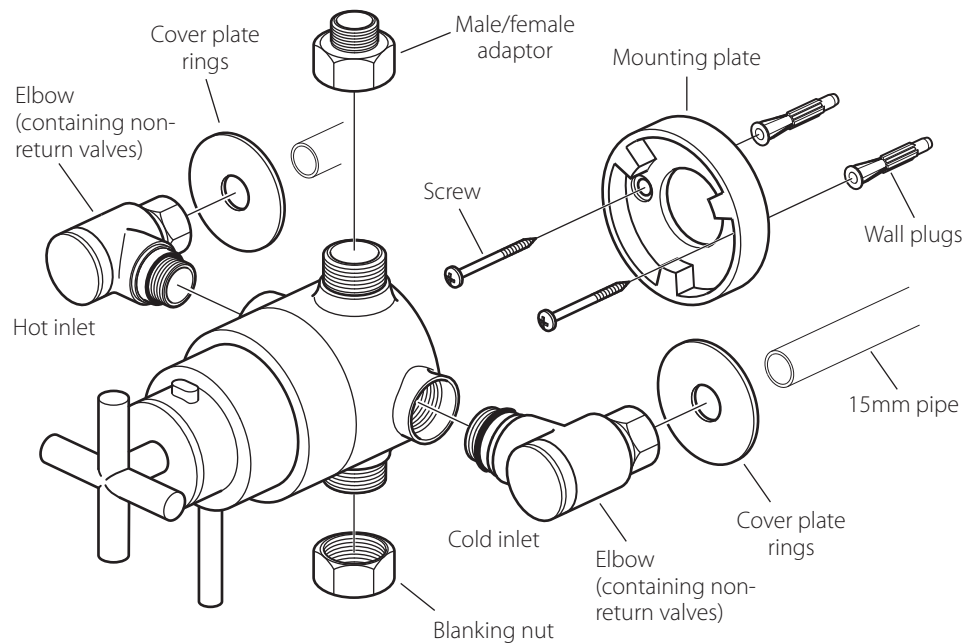

Rinse pipework carefully for a long while before fitting the valve: do not allow dirt, metal particles or shavings to block the filters fitted on inlets.

⚠ Warning! Please check for any hidden cables and pipes before drilling holes in the wall. If you are fitting the valve to a partition wall or a wall of particularly soft substrate you will need specialist fixings.

Remove the mounting plate from the body by loosening the 3 grub screws. Position the mounting plate to the wall and mark the 2 fixing points with a suitable pencil. Remove the mounting plate from the wall, drill the holes to a suitable depth for the wall plugs and secure with suitable screws.

Push the valve body onto the mounting plate and secure with the 3 grub screws.


During and after installation protect the outer parts of the valve to avoid damage to plated surfaces.

Screw the elbows into the valve and then connect hot supply to left inlet of the valve and cold supply to right inlet (marked on the back of the valve H = Hot, C = Cold).

The valve is supplied with a blanking nut and a 3/4" to 1/2" adaptor.

Make all connections to the valve, the top output connection is for a rigid riser and the lower for a shower hose.

installation (concealed valve)

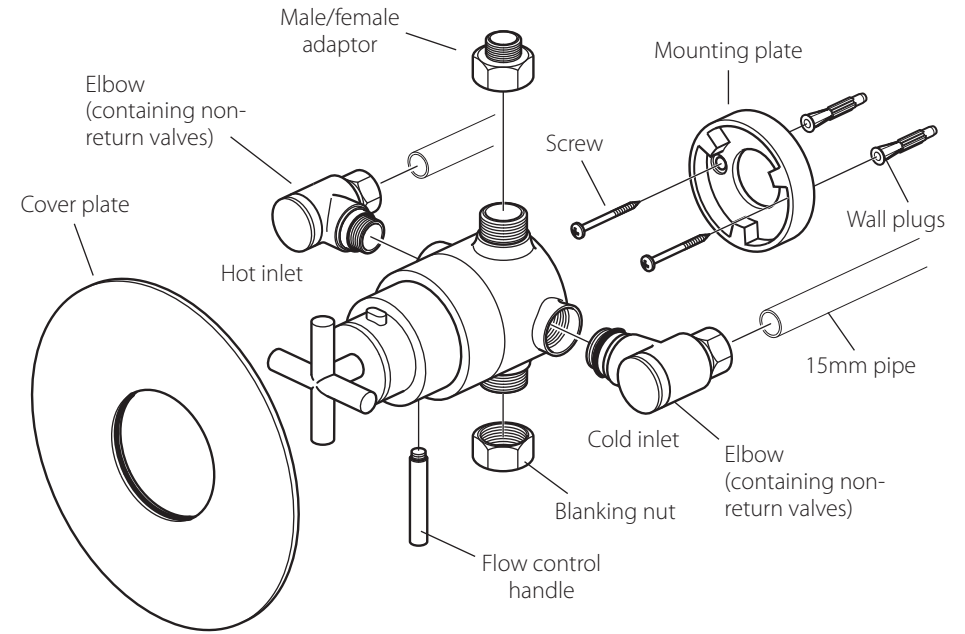

Rinse pipework carefully for a long while before fitting the valve: do not allow dirt, metal particles or shavings to block the filters fitted on inlets.

⚠ Warning! Please check for any hidden cables and pipes before drilling holes in the wall. The valve must be set into the wall between (75mm minimum – 95mm maximum) If you are fitting the valve to a partition wall or a wall of particularly soft substrate you will need specialist fixings.

Remove the mounting plate from the body by loosening the 3 grub screws. Position the mounting plate to the wall and mark the 2 fixing points with a suitable pencil. Remove the mounting plate from the wall, drill the holes to a suitable depth for the wall plugs and secure with suitable screws.

Push the valve body onto the mounting plate and secure with the 3 grub screws.

During and after installation protect the outer parts of the valve to avoid damage to plated surfaces.

Screw the elbows into the valve and then connect hot supply to left inlet of the valve and cold supply to right inlet (marked on the back of the valve H = Hot, C = Cold).

The valve is supplied with a blanking nut and a 3/4" to 1/2" adaptor.

Make all connections to the valve, the top output connection is for a rigid riser and the lower for a shower hose.

Remove the flow control handle by unscrewing it, slide the cover plate over the valve until it makes contact with the wall, refit the control handle.